

# Chemical By-Pass Feeder Tank Series Installation & Operation Instructions

- 1. Install as indicated in options A, B, or C below.
- 2. Isolate feeder from the system for servicing and draining.
- Position the gasket in the groove under the cap before replacing. Seal the cap by hand tightening only. A new gasket may be required if the cap doesn't seal by hand pressure. NOTE: Do not use any tools or wrenches to tighten the cap, hand tighten only.
- Open valves slowly when recharging the system.

**CAUTION:** Do not open under pressure-Close isolation valves and slowly bleed the pressure before opening.

**CAUTION:** Fluid may be hot, use extreme caution to avoid burn hazard.

- 5. Consult American Wheatley HVAC for the proper use of this tank with the Chemical in Question.
- Consult the Chemical Supplier before use in the By-Pass Feeder. Read and follow label instructions before use. Do not combine chemicals in the By-Pass Feeder without Chemical Suppliers recommendation.

JOB NAME		ITEMS	QUANTITY
LOCATION			
CONTRACTOR			-
CONTRACTOR P.O. NO.	_		



1005 E. Houston Broken Arrow, OK 74012 Toll Free: 866-204-5229 PH: 918-317-0401 FAX: 918-317-0407 www.wheatleyhvac.com

e-mail: sales@globalflowproducts.com




## **Typical Piping Details**

With Bladder Type Tanks (BDT Series)

**NOTE:** (If more than one pump, install feeder across the supply and return headers in an accessible location.)

#### **Option A**

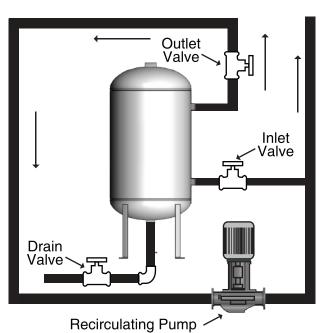


# **Recharge Instructions**

- 1. Close the Inlet and Outlet Valves
- 2. Open the Drain Vale
- 3. When feeder is drained, open Cap by turning counter-clockwise.
- 4. Close Drain Valve
- 5. Add required chemicals into feeder.
- 6. Clean Cap and all sealing surfaces.
- 7. Close Cap by turning clockwise until secure.
- 8. Open Inlet Valve slowly.
- 9. Open Outlet Valve slowly and fully open the Inlet Valve.
- 10. Inspect all seal surfaces and fittings to avoid leaks. Tighten fittings or replace gaskets as required.






## **Option B**

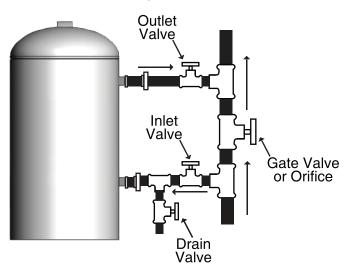

# **Option C**

For either Option, Note carefully the flow arrow shown for each type of feeder.

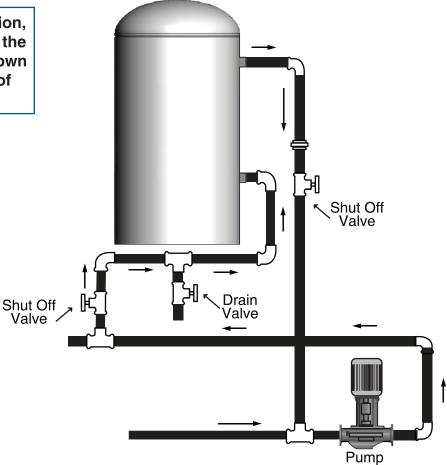



1005 E. Houston, Broken Arrow, OK 74012 Toll Free: 866-204-5229 PH: 918-317-0401 FAX: 918-317-0407

www.wheatleyhvac.com

e-mail: sales@globalflowproducts.com