




HYDROMATIC®

G2FX

Explosion-Proof Submersible Grinder Pumps

(Class 1, Division 1, Group C & D): FM

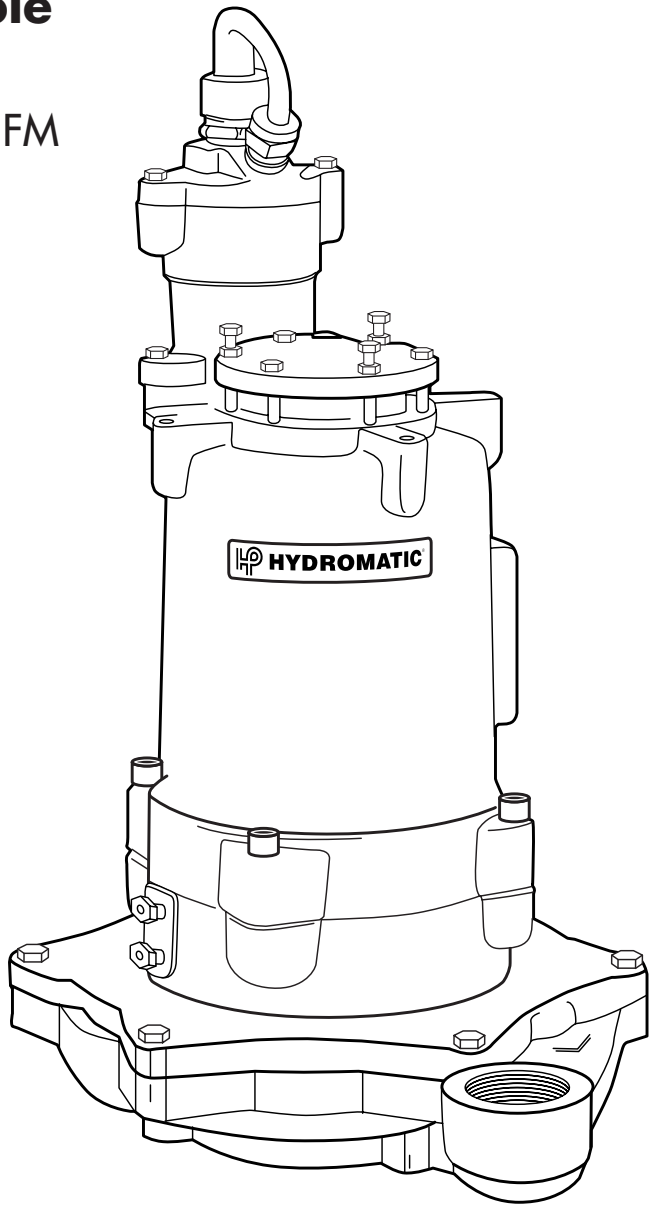

NOTE! To the installer: Please make sure you provide this manual to the owner of the pumping equipment or to the responsible party who maintains the system.



**Pentair
Water™**

General Information

Thank you for purchasing your Hydromatic® pump. To help ensure years of trouble-free operation, please read the following manual carefully.

Before Operation:

Read the following instructions carefully. Reasonable care and safe methods should be practiced. Check local codes and requirements before installation.

Attention:

This manual contains important information for the safe use of this product. Read this manual completely before using this product and refer to it often for continued safe product use. **DO NOT THROW AWAY OR LOSE THIS MANUAL.** Keep it in a safe place so that you may refer to it often.

Unpacking Pump:

Remove pump from carton. When unpacking unit, check for concealed damage. Claims for damage must be made at the receiving end through the delivery carrier. Damage cannot be processed from the factory.

WARNING: Before handling these pumps and controls, always disconnect the power first. Do not smoke or use sparkable electrical devices or flames in a septic (gaseous) or possible septic sump.

Pump:

The explosion-proof submersible pump family was designed in accordance with requirements for hazardous locations. These pumps, connected properly, will provide years of trouble-free service. If servicing is required, the repair should be done by a Hydromatic approved service center.

Application:

These pumps are designed for on-site residential sewage discharge applications with a pH ranging from 6 to 9, specific gravities from 0.9 to 1.1, viscosities ranging from 28 to 35 S.S.U., and temperatures up to 140 degrees Fahrenheit.

Receiving Pump:

Pump should be checked on arrival for possible concealed shipping damage. Any damage should be reported immediately to delivery carrier. Claims for damage must originate at the receiving end. Claims for shipping damage cannot be processed at the factory.

Codes:

All local wiring codes must be observed. Consult the local inspector before installation to avoid costly delays that can occur due to rejection after job is finished.

Pumps Not Operating or in Storage:

Pumps with carbon ceramic seals must have impellers manually rotated (6 revolutions) after setting non-operational for 3 months or longer and prior to electrical start-up.

Seal Failure Probes:

All explosion-proof submersible pumps have two factory-installed moisture detectors (seal failure probes). They are in a normally open series circuit, in the seal chamber. Under normal operating conditions, the circuit remains open. If the lower seal leaks and moisture enters this chamber, the moisture would settle to the bottom of the chamber and will complete the circuit between the moisture detectors.

This circuit must be connected to a sensing unit and signaling device. This is supplied in a Hydromatic control panel.

NOTE: Failure to install such a device negates all warranties by Hydromatic pumps.

Heat Sensors:

All motors in this family have heat sensors on or embedded in the motor winding to detect excessive heat. This prevents damage to the motor. If the sensor trips due to excessive winding temperature, the starter in the panel breaks power to the pump. Once the sensor resets, the starter is to be reset (automatic for F.M.) for continued operation of the pump. This circuitry is supplied in a Hydromatic control panel. The sensors are set to trip at 120 degrees Celsius.

NOTE: Failure to install such circuitry would negate F.M. approval and all warranties by Hydromatic pumps.

Power Cords:

The power cord and heat sensor seal failure cord are potted into the connection box cap. The cords must not be spliced.

NOTE: Each cable has a green lead. This is the ground wire and must be grounded properly per N.E.C., and/or local codes. During normal maintenance procedures power cords should be inspected for abnormal wear and replaced accordingly.

Overload Heaters:

If the Hydromatic electrical panel is not used, starters with 3-leg overload relay must be supplied on 3-phase pumps. Each leg is to have an identical heater sized in accordance with the nameplate amps on the motor housing. The amp draw on these submersible motors is slightly higher than a corresponding horsepower surface motor, so heaters must be sized by the nameplate rating.

Single-phase pumps with capacitor start have a run and a start winding, each drawing a different current. To adequately protect these windings with the appropriate heaters, consult the factory.

NOTE: Red lead is always start winding of pump using single phase.

Pump Installation

Installing Pump in Sump:

Before installing pump in sump, lay it on its side and rotate impeller. Impeller may be slightly stuck due to factory test water so it must be broken loose with a small bar or screwdriver in edge of vanes. The impeller should turn freely. Do not connect the power until after this test.

Clean all trash and sticks from sump and connect pump to piping.

A check valve must be installed on each pump.

Location:

If pumps are installed in an existing basin or concrete sump, the piping can either be connected permanently or rails and brackets can be furnished for mounting to walls of basin. In either case, be sure the Hydromatic non-clog ball check valve is used and that the pumps are submerged in a vertical position. The complete factory built packaged system is recommended for the most satisfactory installation and generally for the lowest cost where expensive installation labor is involved.

Making Electrical Connections:

All electrical wiring must be in accordance with local code, and only qualified electricians should make the installations. Complete wiring diagrams are included for use in making the installation. All wires should be checked for shorts to ground with an ohmmeter or Megger after the connections are made. This is important, as one grounded wire can cause considerable trouble.

IMPORTANT: If equipment is not properly wired and protected as recommended, Hydromatic WARRANTY IS VOID.

Heat Sensor and Seal Failure Connection:

If a Hydromatic control panel is used, terminal blocks are provided for heat sensor and seal failure connections (see Panel Schematic). If a control panel is supplied by others, it must allow heat sensor and seal failure terminations.

Installing Sump Level Control Float Controls:

In either simplex, duplex or triplex systems the lower or turn-off control is to be set to maintain a minimum level in the sump. This level shall be no more than 3¹/₄" from the top of the motor housing down to the surface of the sewage.

The second, or turn-on control, is set above the lower turn-off control. The exact distance between the two floats must be a compromise between a frequent pumping cycle (10 starts per hour maximum) to control septicity, solids and a slower cycle for energy economy. This distance should be determined by the engineer or consulting engineer, depending on the conditions of the application.

For installation of Hydromatic supplied level controls refer to your systems installation and service manual.

Pump Operations

Starting the Pump:

To start the pump, perform the following steps in order:


WARNING! Keep hands and clothing away from cutters and impeller!

1. If pump is 3 phase, the rotation of the impeller must first be checked. Lift pump from sump, lay it down, and quickly turn pump on and then off.


The impeller should turn counterclockwise when viewed from the suction. If rotation is wrong, turn off main breaker and interchange any two line leads to motor to correct rotation.

TYPICAL FM ONLY SCHEMATICS

TYPICAL SINGLE PHASE MOTOR CONNECTIONS

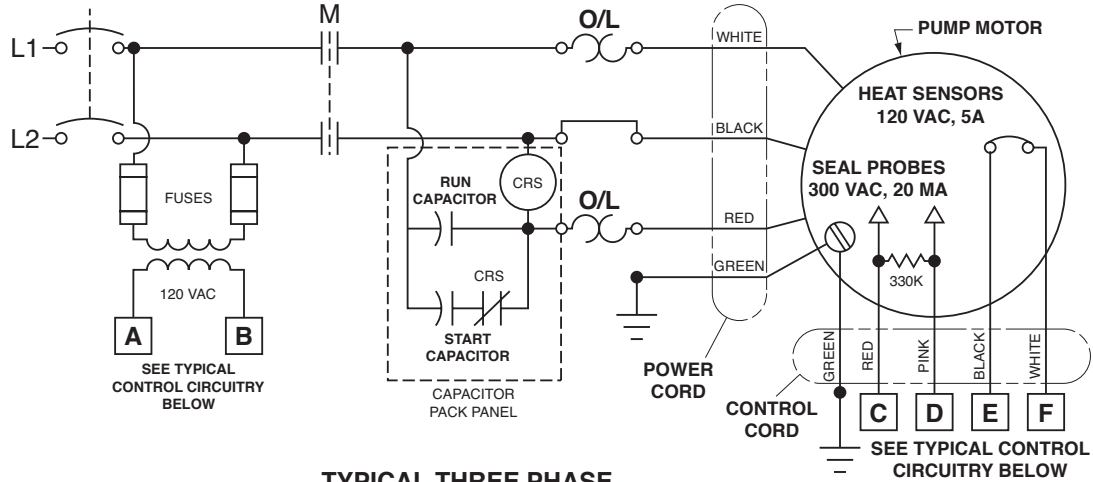

TYPICAL THREE PHASE MOTOR CONNECTIONS

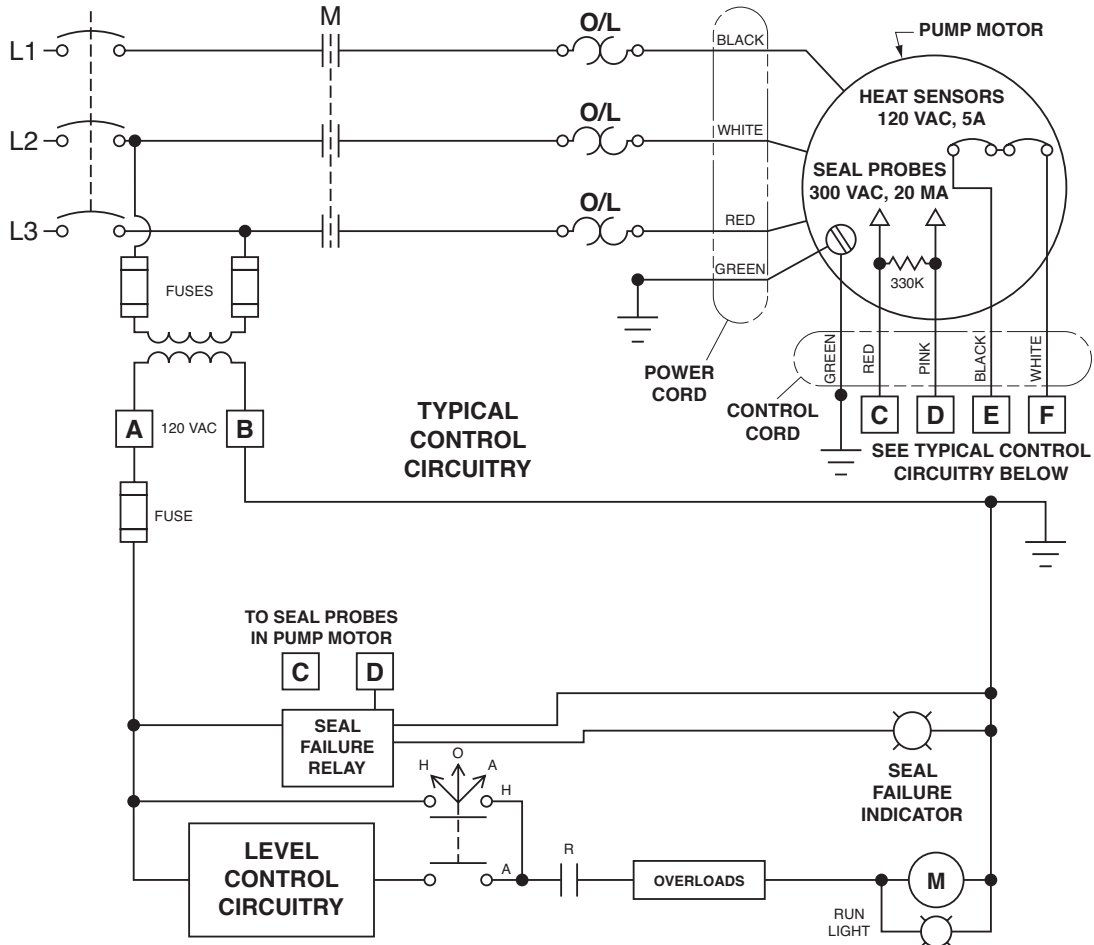

NOTE: CAPACITORS AND/OR CONTROLS SHOULD BE LOCATED OUTSIDE HAZARDOUS AREA AND ENCLOSED IN AN APPROPRIATE ENCLOSURE.

Pump Operations

If pump is piped-in permanently and inlet cannot be observed, rotation will have to be checked by pump operation described later.

If pump is single phase, no rotation check is necessary.

2. Run water into sump until motor is covered.
3. Open gate valve in discharge line.
4. Turn pump on. If pump runs and sump liquid does not pump down, stop pump and close discharge gate valve. Then lift pump until sealing flange is open to vent off trapped air. Lower pump, open discharge valve, and start the pump again.

If pump is piped in permanently, it may be necessary to break union at pump discharge to clear air.
5. If pump is 3 phase, piped-in permanently, and still does not operate properly after venting, rotation is wrong and can be reversed by interchanging any two line leads.
6. Level controls should be set in accordance with "Installing Sump Level Control Float Controls" above.

CAUTION: Be sure ground wire is connected to good ground such as a water pipe. This is important for safety.

Pump Maintenance

As the motors are oil filled, no lubrication or other maintenance is required.

If the heat sensor and seal failure are hooked up properly, no attention is necessary as long as the seal failure indicator light doesn't come on. To ensure continuity of the seal sensor leads, a test light is provided on intrinsically safe Hydromatic panels as standard equipment.

Pump should be checked every quarter for corrosion and wear.

Service Instructions:

IMPORTANT: Read all instructions before replacing any parts.

WARNING: Before handling these pumps and controls, always disconnect the power first.

Do not smoke or use sparkable electrical devices or flames in a septic (gaseous) or possible septic sump.

Field Service on Hydromatic Explosion-Proof Pumps:

If a Hydromatic explosion-proof pump is used in a hazardous location, or if the pump is still in warranty, the pump must be returned to the factory for service or repaired in an authorized Hydromatic service shop. This will ensure the integrity of the hazardous location rating of the pump and comply with our warranty requirements. Pumps out of warranty and not used in a hazardous location can be field

serviced by any reputable serviceman. When any field servicing is performed on a pump, the following instructions should be followed carefully.

Disconnecting Pump Cords:

If a Hydromatic explosion-proof pump is to be removed from its location, one of two ways may be used to disconnect the pump cords from the rest of the system.

Pump cords may be disconnected at control panel (on sump mounted control panels) and cord assembly taken with pump.

CAUTION: If cord openings from sump to control panel are open, gases from sump could enter panel and an explosive condition could exist. Seal openings!

Pump cords may be disconnected at pump by removing the cord and cap assembly, unplugging sensor wires, and removing wire nuts.

After removal from pump reinstall wire nuts in cord and cap assembly and install protective cover. (Required accessory item when remote mounted control panel is used PN #11159-000-1.)

CAUTION: Do not reconnect power to a cord and cap assembly while removed from pump.

Replacing Cords:

The power cord and heat sensor/seal failure cord are potted into the connection box cap, forming the cord and cap assembly.

If cords require replacement due to damage or cords being too short, cord and cap assembly must be replaced as a complete assembly available from factory.

Pump Maintenance

1. Remove cord and cap assembly.
2. Disconnect wires taking note of color/number coding.
3. Connect wires of new cord and cap assembly in same manner as the old one was removed.
4. Reinstall cord and cap assembly taking care not to pinch wires.
5. Check pump for proper rotation before returning to normal service.

Axial Cutter Adjustment:

To maintain the proper face clearance between the axial cutter (57) and the cutter ring (58), follow this procedure.

1. Close gate valve at pump discharge.
2. Turn off circuit breaker.

CAUTION: Never work on pump unless power has been turned off.

3. Remove pump from sump.
4. Referring to drawing, loosen jam nuts (52) on set screws (53) located on top of bearing housing (8).
5. Loosen set screws (53).
6. Tighten hex head cap screws (40) until axial cutter (57) just drags on cutter ring (58) when radial cutter (56) is turned by hand.
7. Back off on hex screws (40) $\frac{1}{8}$ turn.
8. Tighten set screws (53) to lift axial cutter (57) for proper face clearance.
9. Tighten jam nuts (52) on set screws (53).

10. Again turn radial cutter (56) by hand to determine if shaft has any drag.

11. If there is still some drag, repeat above steps and back off hex screws (40) further.

IMPORTANT: Be sure that both hex screws (40) are tightened or loosened the same amount and that the set screws (53) are tight against the motor housing (34). Also, remember that the set screws (53) increase the clearance while the hex screws (40) decrease the clearance.


Replacing Grinder Parts:

If necessary to replace grinder parts because of wear or to inspect for clogging.

1. Close gate valve at pump discharge.
2. Turn off circuit breaker.

CAUTION: Never work on pump with power on. Be sure ground wire from pump is connected to a good ground such as a water pipe.

3. Remove pump from sump.
4. Unscrew cap screws (19) and remove cutter ring retainer (54).
5. Unscrew hex head cap screws (15) and remove volute case (24).
6. Radial cutter (56) and axial cutter (57) are now exposed. If checking for clogging, these parts can now be cleaned without removing them from the shaft.
7. If necessary to replace cutters, remove cap screws (21), washer (20), and radial cutter (56) and impeller (18) from shaft while tapping with a plastic hammer to loosen. Disassemble radial cutter (56)

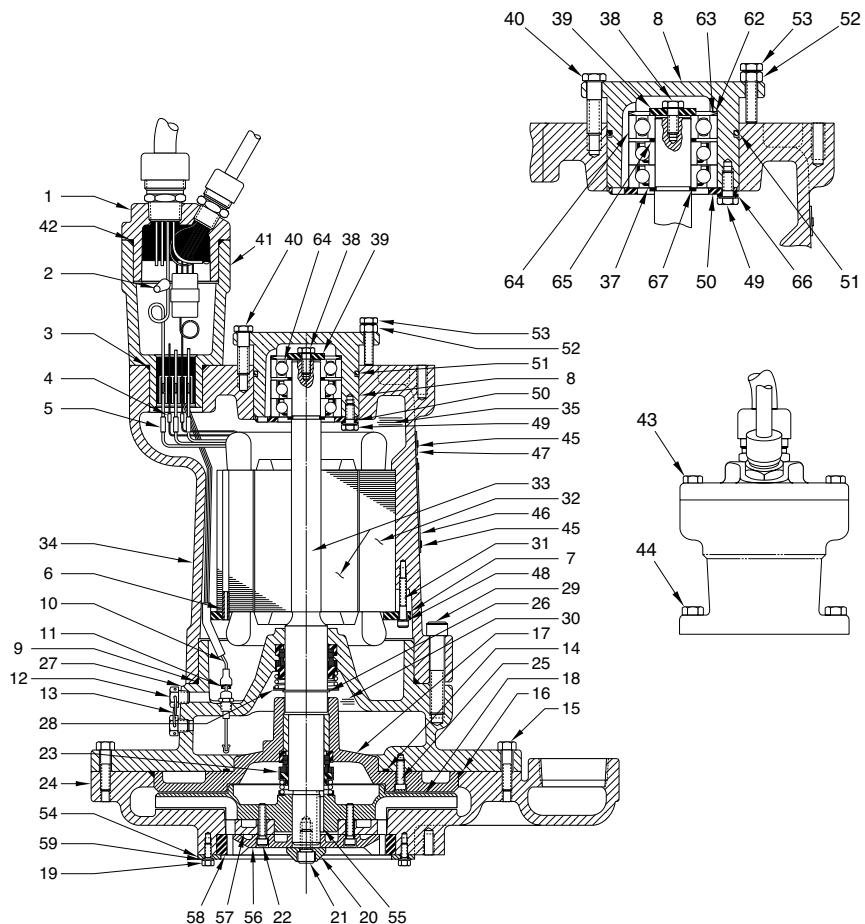

Pump Maintenance

and axial cutter (57) from the impeller (18) by removing socket head cap screws (25).

8. Clean all parts thoroughly before proceeding with assembly. Replace impeller (18), axial cutter (57), and radial cutter (56) and secure together with socket head cap screws (25). Make sure impeller key (55) is in place between shaft and impeller (18).
9. Loosen hex head screws (40) $\frac{1}{2}$ turn. Replace cutter ring (58) and cutter ring retainer (54). Now repeat steps 4–11 under Axial Cutter Adjustment. It may be necessary to loosen hex head cap screws (15) in pump case (24) and tap with a hammer to get proper clearance on O.D. of radial cutter (56).
10. Plug pump into power and operate for a few seconds only to ensure parts are not rubbing.

Replacing Seals:

1. Remove pipe plug (12) from motor and seal chamber and drain out all oil. The lower pipe plug drains the seal motor housing. Check for water in the oil drained from motor chamber. If there is some water in this oil, the pump must be completely dismantled and the stator dried out or replaced if the resistance to ground is less than 500,000 ohms after drying. A hypot check of 1,500 volts for 230 volt motors and 2,000 volts for 460 volt motors should be performed.
2. Remove cutters, impeller and pump parts as described under "Replacing Grinder Parts".


3. Remove socket head cap screw (25) in seal plate (17) and screw two of the screws into the tapped back-off holes to force seal plate (17) from seal housing (27). Pulling this plate (17) off will also force seal (23) from shaft. Remove lower seal (23) from seal plate (17).
4. Remove snap ring (26) and pull upper seal (28) from shaft. It may be necessary to use packing hooks to remove seal. Use a screwdriver to break the upper stationary ceramic seal ring so that it can be removed easily.

CAUTION: Do not use any old seal parts. Replace all parts with new pieces. Mixing old and new parts will cause immediate seal failure.

5. When cleaning all parts before replacement, check to be sure sleeve bearing or shaft is not

worn. Be sure all O-rings are in excellent condition without cuts or nicks, and replace them if not in excellent condition. Use O-ring lube to prevent cutting at assembly.

6. After upper seal is replaced we recommend an air test be made by inserting 5 lb. of air pressure into the motor housing and allow ample time for air to escape. If pressure remains steady for five minutes continue by replacing lower seal plate, lower shaft seal and impeller. Repeat the air test in the seal chamber. If this test is satisfactory, complete the assembly and cutter adjustment as described earlier. Next the pump must be filled with oil. Start by filling the seal chamber. Do not fill completely. Allow about $\frac{1}{2}$ inch air space for expansion. Next fill the motor housing just above the motor winding.

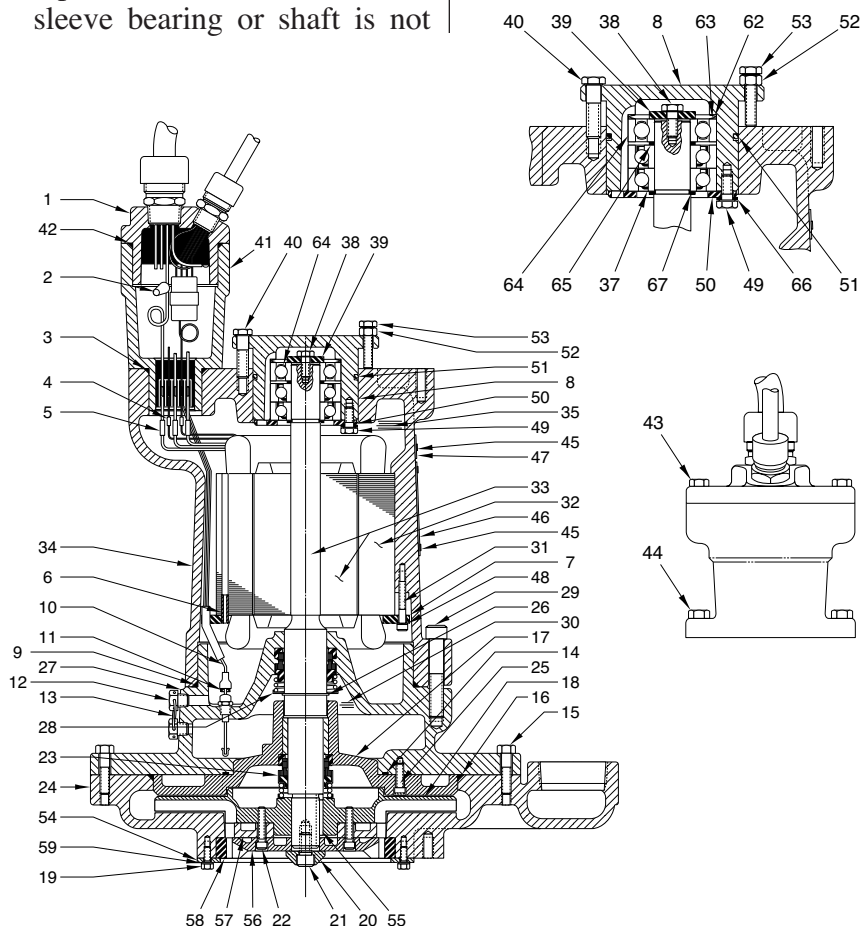

Pump Maintenance

7. Use only Hydromatic submersible oil in motor chamber and seal chamber. In an emergency, a high grade transformer oil can be used in the motor chamber and #20 non-detergent automobile oil can be used in the seal chamber.


Replacing Motor Stator:

1. If necessary to replace stator, completely dismantle pump as described above.
2. Drain all oil from upper housing. Remove drain plug (12) in bottom of bearing housing, and remove bearing housing (8), and rotor and shaft assembly (33). When housing and rotor are removed, motor leads can be disconnected through the bearing cap bore. The leads are connected with connectors and must be cut. **DO NOT TAPE LEADS WHEN REPLACING STATOR AS OIL WILL DETERIORATE THE TAPE AND CAUSE MOTOR FAILURE. USE ONLY INSULATED BUTT CONNECTORS.**
3. If cord leads are burned, it will be necessary to replace power cord and cord group assembly (1). If any wires in the connection box (41) are burned, it will be necessary to replace the connection box assembly. Connect wires per connection diagram.
4. Remove motor housing bolts (29) and lift off housing (34). Use care in lifting as the seal failure connection wire must be disconnected before housing is completely removed.

5. Remove stator screws (31) and set housing (34) on hardwood blocks. Bump housing (34) up and down on hardwood block to loosen stator which should drop out. On some 3 and 5 HP units, a stator spacer ring (36) will also drop out. This should be reinstalled with the new stator.
6. Thoroughly clean housing (34) and other parts and install new stator.
7. Connect leads through housing bore and tuck leads back behind the stator windings to prevent rubbing on rotor. **USE ONLY INSULATED BUTT CONNECTORS TO CONNECT WIRES.**
8. If the ball bearing (37) is rusted or feels rough when turned, it should be replaced. Remove hex head cap screw (38) and washer (39) and press the bearing off the shaft. Install

the new bearing by pressing on inner face only. **PRESSING ON THE OUTER FACE WILL RUIN THE BEARING.**

9. In reassembly, replace any O-rings that are defective. Use Parker O-Ring Lube on all O-rings for easy assembly and to prevent cutting.
10. Completely reassemble, making sure seal failure wires are connected.
11. Make a high voltage ground test on each wire. The only wires that should show ground are the two green leads.
12. Air test the motor housing and the seal housing by inserting 5 lb. of air pressure and allow ample time for air to escape. If pressure remains steady for five minutes, you are ready to fill the pump with oil.
13. Fill seal chamber with oil by laying pump on side with oil

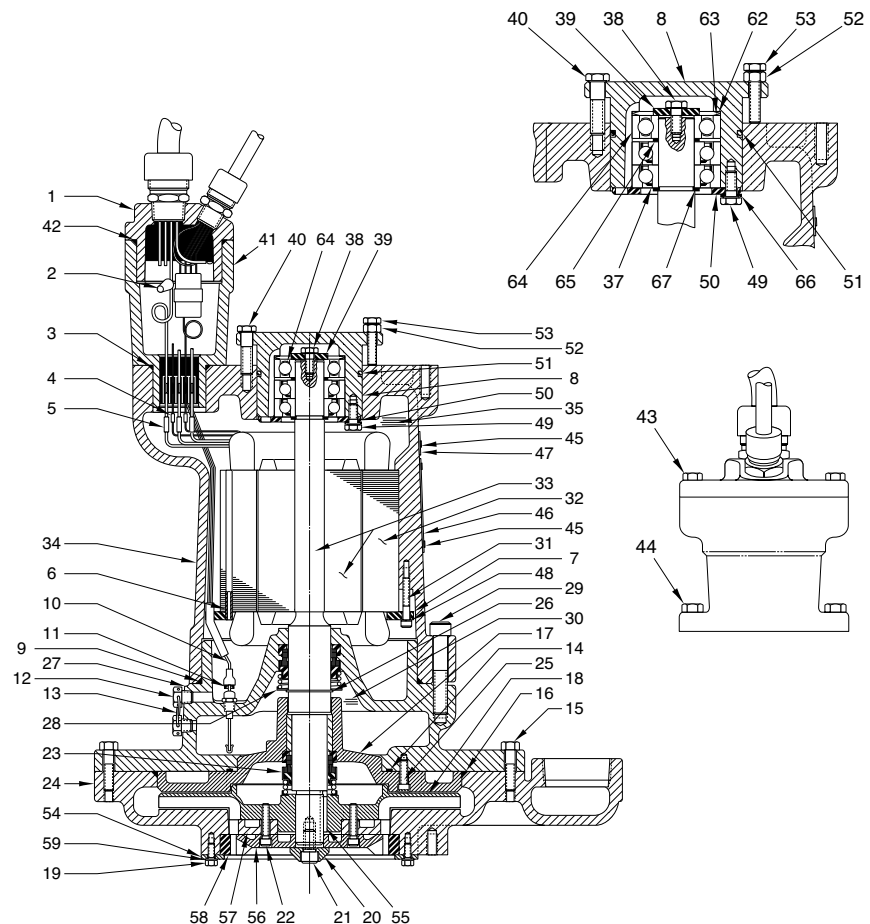

fill hole upright. Do not completely fill; leave oil about ½" below plug hold. Use only Hydromatic submersible oil. Replace plug with Permatex on threads.

14. Refill motor chamber with oil through connection box opening. Use high grade, non-synthetic transformer oil or Hydromatic special submersible oil. Fill housing until oil covers top of windings. Leave air space for expansion.
15. Always run pump for a few seconds after assembly work to be sure all parts run smoothly and are correctly adjusted before replacing in sump. Check again for correct rotation. Pump should rotate counterclockwise when viewed from the suction.

NOTE: When applying power, be sure the pump is restrained from turning by holding the pump at the motor housing, or by clamping it in a holding fixture.

CAUTION: Always keep hands away from the pump cutter area after the circuit breaker is reconnected.

Pump Troubleshooting

Below is a list of trouble and their probable causes.

No liquid delivered

1. Pump air bound
2. Discharge head too high
3. Pump or piping plugged
4. Wrong rotation
5. Speed too low

Insufficient liquid delivered

1. Discharge head too high
2. Impeller or cutters partially plugged or damaged
3. Wrong rotation
4. Incorrect diameter impeller
5. Speed too low

Insufficient discharge pressure

1. Wrong rotation
2. Air or gases in liquid
3. Impeller damaged
4. Incorrect impeller diameter
5. Speed too low

Pump overloads motor

1. Wrong rotation
2. Specific gravity or viscosity of liquid too high
3. Speed too high
4. Head lower than rating, pumping too much liquid
5. Pump clogged
6. Defective bearings
7. Defective impeller

Pump is noisy

1. Defective bearings
2. No axial clearance between impeller and volute
3. No axial clearance between radial cutter and cutter ring

If the cause of the trouble cannot be determined and corrected as outlined above, contact your nearest factory representative.

G2FX Parts List

ORDERING REPLACEMENT PARTS: Product improvements are made from time to time. The latest part design will be furnished as long as it is interchangeable with the old part. When ordering replacement parts, always furnish the following information: (1) pump serial number, (2) pump model and size, (3) part description, (4) part number, (5) impeller diameter (if ordering impeller), (6) quantity required, and (7) shipping instructions.


Ref. No.	Part No.	Part Description	Qty.
1	10894-003-5	Cord Cap Assy. 30' 3 & 5 HP	1
	10894-005-5	Cord Cap Assy. 50' 3 & 5 HP	1
	10894-008-5	Cord Cap Assy. 30' 7-1/2 HP	1
	10894-010-5	Cord Cap Assy. 50' 7-1/2 HP	1
2	00557-000-1	Connector 3ø, 230V	1
	00557-000-1	Connector 3ø, 460V	3
	00853-000-1	Connector 3 HP, 1ø, 200/230V	
		Connector 3 & 5 HP, 3ø, 200/230/460V	
		Connector 3, 5 & 7-1/2 HP, 575V	
	02494-000-1	Connector 7-1/2 HP, 3ø, 200V	3
3	00834-008-1	O-Ring	S 1
4	10898-000-1	Connector	4
5	11666-000-1	Connector 7-1/2 HP, 3ø, 200V	3
	11675-000-1	Connector 3 HP, 1ø, 200/230V	3
		Connector 3 & 5 HP, 3ø, 200V	
		Connector 3, 5 & 7-1/2 HP, 3ø, 575V	
	11675-000-1	Connector 3, 5 & 7-1/2 HP, 3ø, 230/460V	9
6	05454-001-1	Roll Pin	1
7	00299-002-1	Ring — Stator Retainer	1
8	07895-005-2	Bearing Housing	1
9	00150-020-1	O-Ring	S 1
10	10900-001-5	Seal Sensor Assy.	1
11	10901-000-1	Seal Failure Probe	2
12	00119-010-1	Pipe Plug	2
13	10902-001-3	Safety Wire 7"	1
14	00150-042-1	O-Ring	S 1
15	00238-007-1	Capscrew	6
16	00150-037-1	O-Ring	S 1
17	07889-007-5	Bearing & Seal Plate Assy.	R 1
18	07894-001-2	Impeller 10.50"	1
	07894-002-2	Impeller 10.00"	1
	07894-003-2	Impeller 9.50"	1

Ref. No.	Part No.	Part Description	Qty.
	07894-004-2	Impeller 9.00"	1
	07894-005-2	Impeller 8.50"	1
	07894-006-2	Impeller 8.00"	1
	07894-007-2	Impeller 7.50"	1
	07894-008-2	Impeller 7.00"	1
19	00176-003-1	Capscrew	3
20	08422-000-5	Impeller Washer	1
21	00556-003-1	Capscrew — Impeller	1
22	00517-010-1	Screw	2
23	04916-000-1	Seal — Lower	S 1
24	07891-000-2	Volute Case	1
25	00517-004-1	Screw	4
26	00975-003-1	Snap Ring	1
27	10915-001-2	Seal Housing	1
28	00920-001-1	Upper Seal	S 1
29	00568-011-1	Capscrew	4
31	00517-008-1	Screw	4
32	24407C206	Stator 5 HP, 3ø, 230/460V	1
	24407C205	Stator 5 HP, 3ø, 200V	1
	24407C207	Stator 5 HP, 3ø, 575V	1
	24407C202	Stator 3 HP, 3ø, 230/460V	1
	24407C201	Stator 3 HP, 3ø, 200V	1
	24407C203	Stator 3 HP, 3ø, 575V	1
	24407C200	Stator 3 HP, 1ø, 230V	1
	14698-203-1	Stator 3 HP, 1ø, 200V	1
	24407C209	Stator 7-1/2 HP, 3ø, 230/460V	1
	24407C208	Stator 7-1/2 HP, 3ø, 200V	1
	24407C210	Stator 7-1/2 HP, 3ø, 575V	1
33	01329-023-5	Rotor w/Shaft 3, 5 & 7-1/2 HP, 3ø	1
	13922-021-5	Rotor w/Shaft 3 HP, 1ø	1
34	07890-001-2	Motor Housing	1
37	07167-013-1	Upper Bearing (Bottom)	R 1

Ref. No.	Part No.	Part Description	Qty.
38	00101-005-1	Capscrew	1
39	00156-056-1	Washer	1
40	00238-044-1	Capscrew	3
41	10895-000-5	Connector Box Assy. 3ø, 230/460V	1
	10895-001-5	Connector Box Assy. all 1ø & 3ø, 200/575V	1
42	00834-013-1	O-Ring	S 1
43	00101-007-1	Capscrew	2
44	00238-006-1	Capscrew	2
45	04580-001-1	Drive Screw	4
46	13425-034-1	Nameplate	1
48	00995-008-1	Lock Washer	4
49	00101-005-1	Capscrew	4
50	07897-001-1	Bearing Retainer	1
51	00150-029-1	O-Ring	S 1
52	00114-005-1	Nut	3
53	00101-036-1	Screw	3
54	07907-000-1	Cutter Ring Retainer	1
55	06579-003-1	Key	1
56	07903-000-2	Radial Cutter	R 1
57	00794-000-2	Axial Cutter	R 1
58	07905-000-2	Cutter Ring	R 1
59	00177-004-1	Lock Washer	3
62	00064-008-1	Load Spring	1
63	00628-033-1	Shim .005	(6) As Req.
64	00065-030-1	Upper Bearing (Top)	R 1
65	00156-057-1	Washer	1
66	00177-006-1	Lock Washer	4
67	00975-023-1	Snap Ring	1
	51700-058-7	Seal Kit	
	51700-115-7	Rebuild Kit	
	*	Impeller Kit	

Notes: S — Parts in Seal Kit C — Parts in Carbide Seal Kit I — Parts in Impeller Kit R — Parts in Rebuild Kit *Consult Factory

G2FX

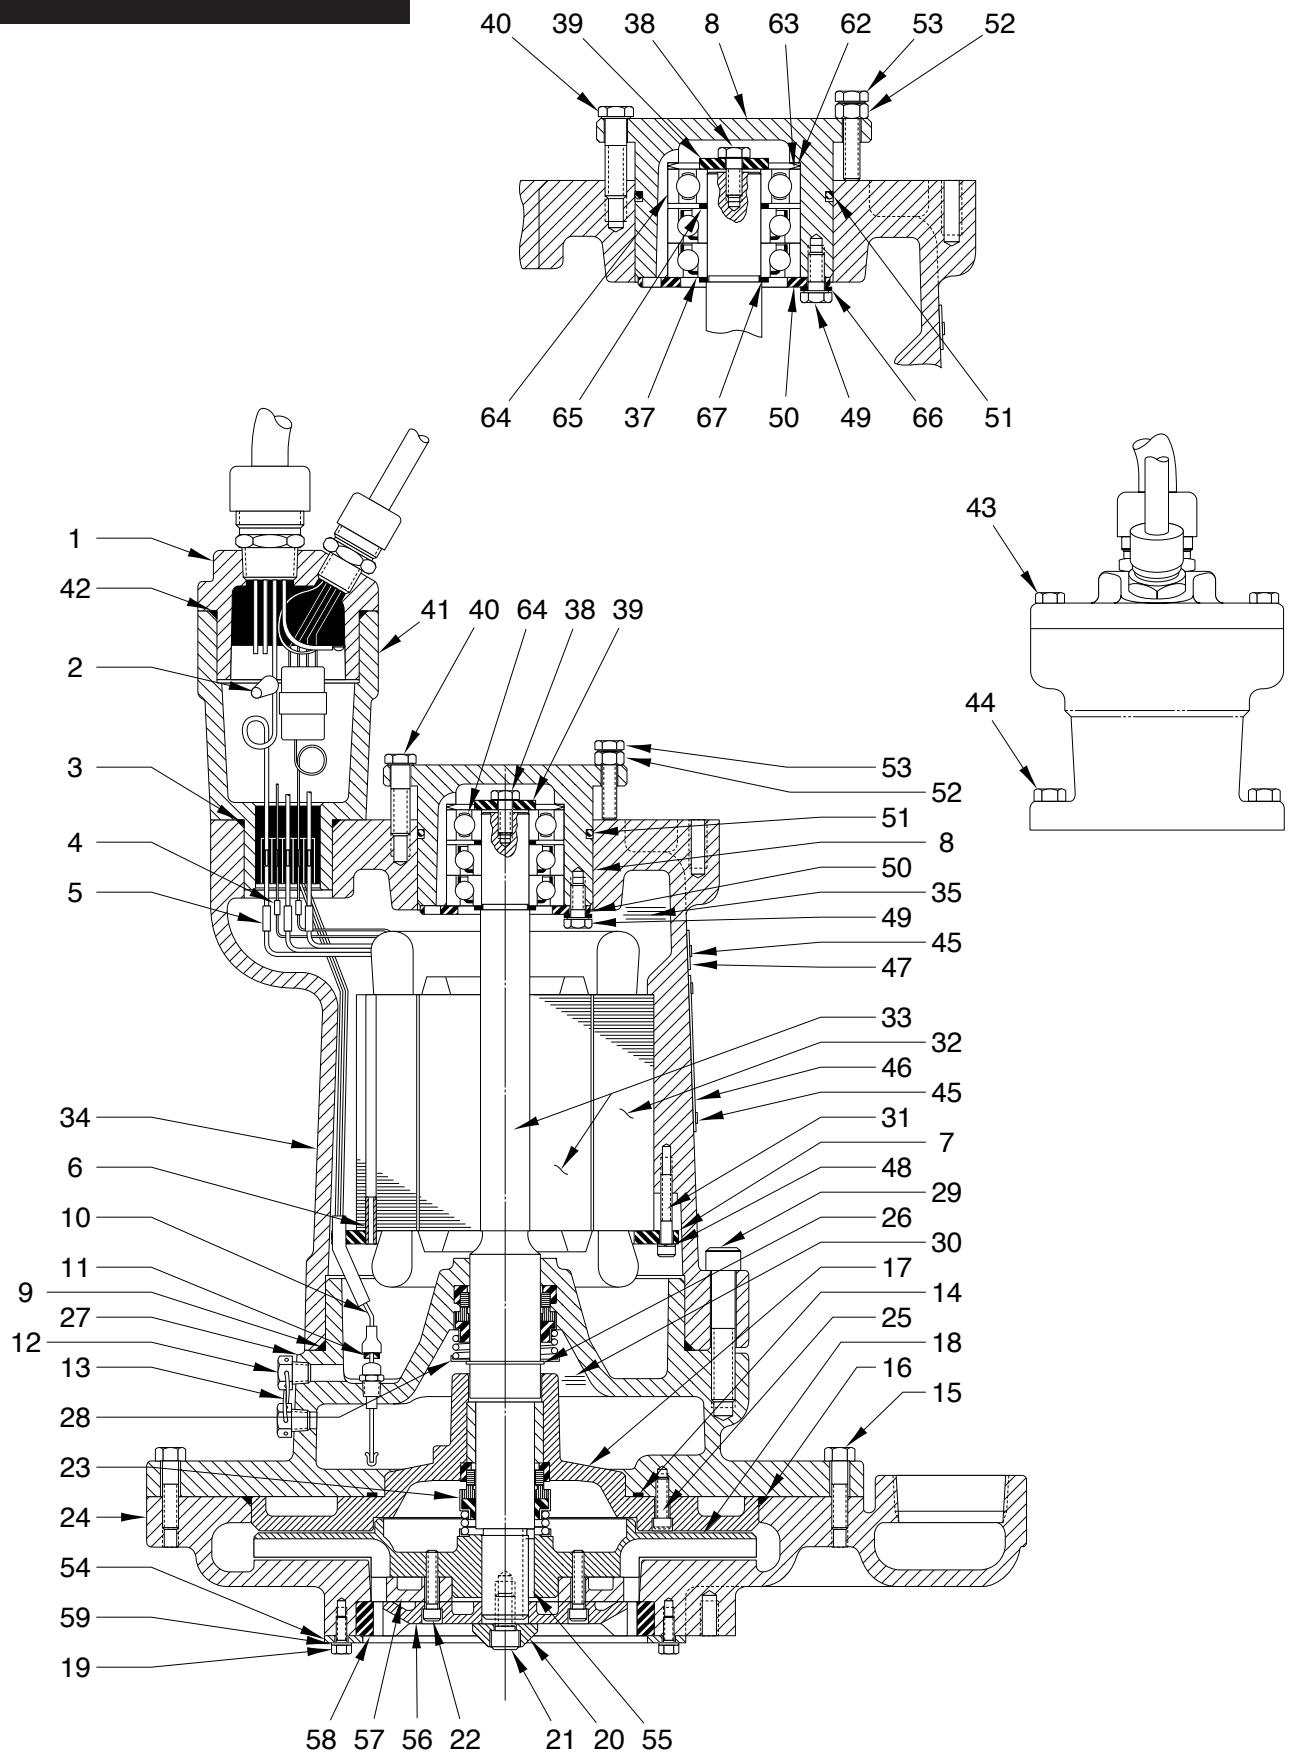

WARRANTY

Hydromatic® warrants to the original purchaser of each Hydromatic product(s) that any part thereof that proves to be defective in material or workmanship within one year from date of installation or 18 months from manufacture date, whichever comes first, will be replaced at no charge with a new or remanufactured part, F.O.B. factory. Purchaser shall assume all responsibility and expense from removal, reinstallation and freight. Any item(s) designated as manufactured by others shall be covered only by the express warranty of the manufacturer thereof. This warranty does not apply to damage resulting from accident, alteration, design, misuse or abuse. The pump must be installed, operated and maintained in accordance with the published instructions of the appropriate Installation & Service Manual.

All dual seal non-clogs and 3–5 HP grinders must have seal failure and heat sensors attached and functional for Warranty to be in effect. If a seal failure should occur, Hydromatic will cover only the lower seal and labor thereof. Labor is based on Authorized Service Center contract allowance. If the heat sensor is not attached and functional, Warranty is void. If the seal failure sensor is not attached and functional, Warranty is void.

If the material furnished to the Buyer shall fail to conform to this contract or to any of the terms of this written warranty, Hydromatic shall replace such nonconforming material at the original point of delivery and shall furnish instruction for its disposition. Any transportation charges involved in such disposition shall be for the Buyer's account. The Buyer's exclusive and sole remedy on account or in respect of the furnishing of material that does not conform to this contract or to this written warranty, shall be to secure replacement thereof as aforesaid. Hydromatic shall not in any event be liable for the cost of any labor expended on any such material or for any incidental or consequential damages to anyone by reason of the fact that such material does not conform to this contract or to this written warranty.

ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE DISCLAIMED TO THE SAME EXTENT AS THE EXPRESS WARRANTY CONTAINED HEREIN. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

MANUFACTURER EXPRESSLY DISCLAIMS AND EXCLUDES ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ARISING IN CONNECTION WITH THIS PRODUCT, INCLUDING WITHOUT LIMITATION, WHETHER IN TORT, NEGLIGENCE, STRICT LIABILITY CONTRACT OR OTHERWISE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



HYDROMATIC®

Pentair Water

USA

740 East 9th Street, Ashland, Ohio 44805
Tel: 419-289-3042 Fax: 419-281-4087

www.hydromatic.com

– Your Authorized Local Distributor –

CANADA

269 Trillium Drive, Kitchener, Ontario, Canada N2G 4W5
Tel: 519-896-2163 Fax: 519-896-6337